




Mobile Media Solutions


Perfect Fit For Select 2007-Up Chevrolet/GMC Trucks Installation Manual KTX-GM8-O

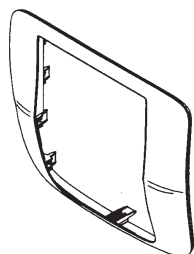


GM Trim Panel x 1
(Panel 7307)




Power Harness x 1

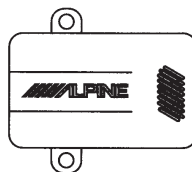


On-Star/Steering Wheel
Interface Module x 1

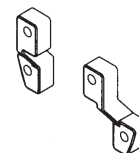


Spacers x 2

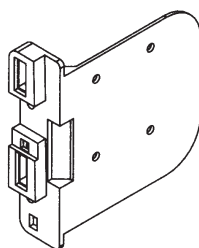

Left Bracket x 1
(Panel 7309)

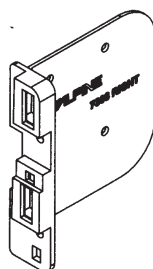

Right Bracket x 1
(Panel 7308)

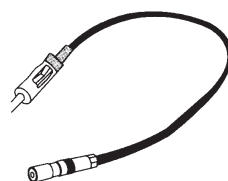

GM Antenna
Adapter



Extended Mounting
Screws for Factory
A/C x 4

Introduction

This KTX-GM8-O Perfect Fit installation kit is for Select 2007-Up Chevrolet Truck/SUV's with or without the Bose audio system. Included are all the parts needed to install your Alpine INE-Z928HD Audio Video Navigation system. KTX-GM8-O Perfect Fit installation kit also includes an interface module that allows steering wheel remote control of the Alpine system. Refer to the individual instruction sections of this manual to remove your vehicle's factory radio and assemble the kit.

Caution! Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a digital multimeter to check vehicle wiring. Do not use a test light! A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory airbag wiring. Airbags can accidentally deploy causing serious injury or even death.

Notes:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.



Compatibility List

Chevrolet

Avalanche 2007-2012
Silverado 2007-2012
Suburban 2007-2012
Tahoe 2007-2012



GMC

Sierra 2007-2012**
Yukon 2007-2012
GMC Yukon XL 2007-2012

**Not applicable to Fleet trucks or Upper-dash OEM stereo locations

Factory Stereo Removal


1. Use a Panel Removal Tool to carefully unsnap dash/stereo bezel. These clips snap in very tight so be careful!

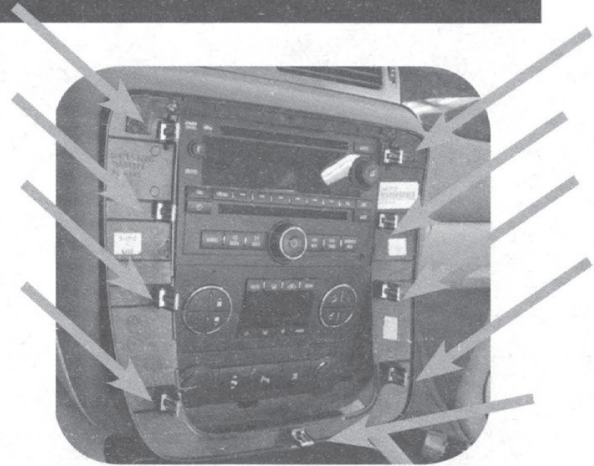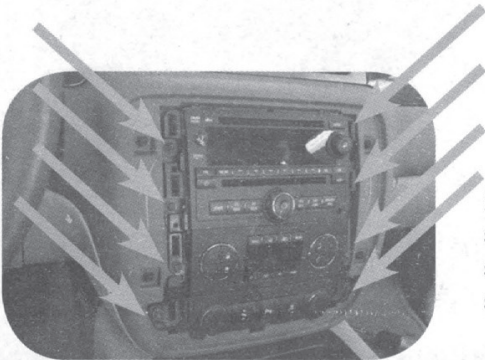

2. Extract (4) 9/32"-7mm screws securing the Factory stereo, disconnect and remove. Extract (4) 9/32"-7mm screws securing the Factory HVAC/Aux control assembly and pull slightly away from dash.

Mounting The Stereo



1. Attach brackets 7309 and 7308 to the Alpine head unit using the supplied ISO screws (that come with the head unit).

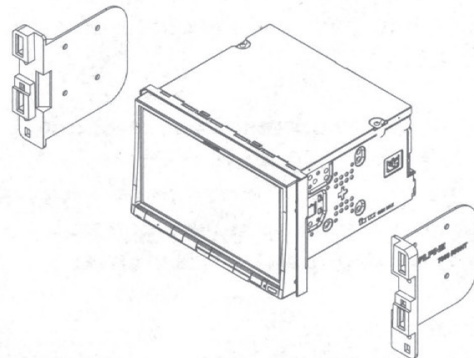


2. Plug in the supplied radio harnesses and steering wheel controls. Run Bluetooth mic, and install foot brake and parking brake wires.

Mounting The Stereo Continued

3. Connect and mount the stereo in the dash.
(Re-use the Factory OEM stereo hardware.)

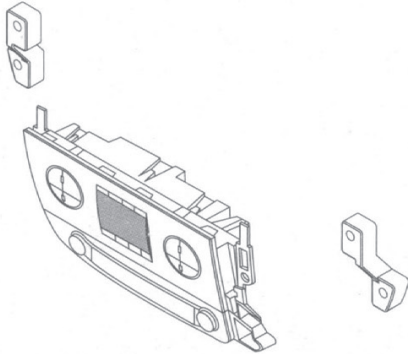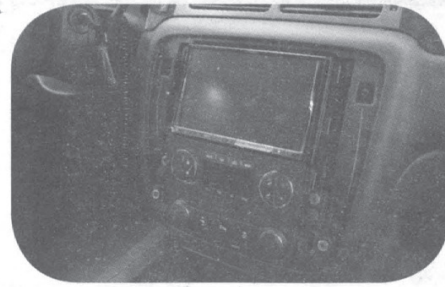

4. Place spacers behind the Factory HVAC/
Aux switch control assembly and re-install
it using the longer screws provided in the
kit.

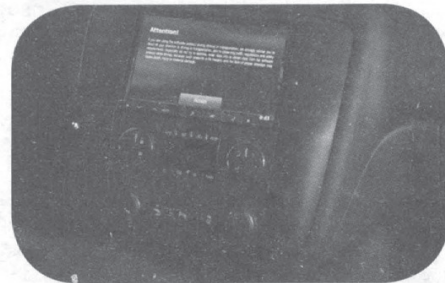


5. Snap the 7307 Perfect Fit bezel around the
stereo and HVAC unit.


Steering Wheel Controls

Steering Wheel Control Operation (when vehicle is equipped)

1. Source
2. Volume Up
3. Volume Down
4. Next Preset
5. Seek/Track Down
6. Mute
7. Seek/Track Up

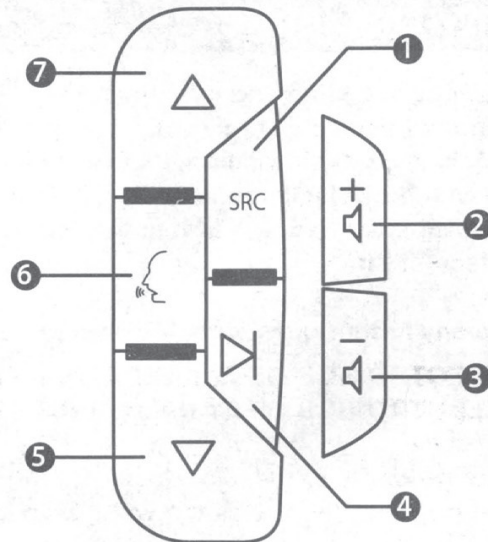

Wiring Harness Diagram

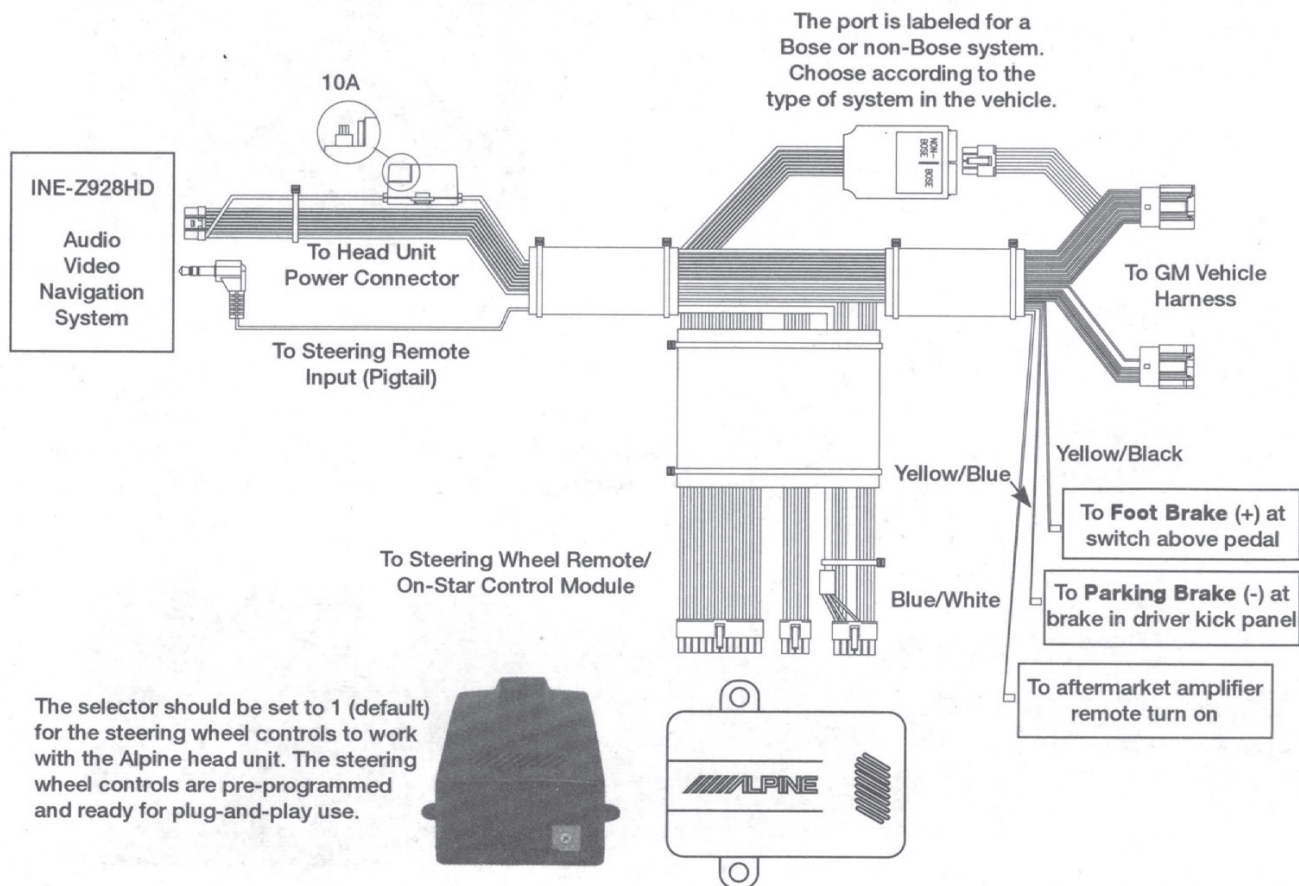

Notes:

- This product is not applicable to vehicles equipped with PREMIUM BOSE systems (Y91/Y92/Z75).
- This information can be found on equipment code sticker in the glove box.
- Not applicable to Fleet trucks or Upper-dash OEM stereo locations.

Liability Disclaimer

Due to changes in design and manufacturing that may occur with your specific vehicle, it is important that you do not rely solely on vehicle information contained in this installation manual, such as dash disassembly, wire harness, and codes. Such information should be confirmed with the vehicle manufacturer. Alpine Electronics, Inc. and its affiliated companies is not responsible for damage that may occur to you or your automobile during the installation of the Perfect-Fit Kit.

If you have any further questions, feel free to contact Alpine Tech Support at 1-800-NAV-HELP.

ALPINE ELECTRONICS OF AMERICA, INC., 19145 Gramercy Place, Torrance, CA 90501, U.S.A

ALPINE ELECTRONICS OF CANADA, INC., 777 Supertest Road, Toronto, Ontario M3J 2M9, Canada

Do not send products to these addresses.

Call the toll free number or visit the website to locate a service center.



PERFECT FIT™ INSTALLATION KIT

KIT D' INSTALLATION PERFECT FIT™

KTX-GM8-O

**2007-UP
SELECT GM VEHICLES
INSTALLATION KIT
WITH ONSTAR**

KTX-GM8-O

**2007-UP
SELECT GM VEHICLES
INSTALLATION KIT
WITH ONSTAR**



////ALPINE
Mobile Media Solutions

ALPINE ELECTRONICS OF AMERICA, INC.
www.alpine.com
DRIVING MOBILE MEDIA SOLUTIONS

- PERFECT SHAPE AND COLOR MATCH TO OEM DASH FOR FACTORY FIT
 - INCLUDES ALPINE-TO-VEHICLE HARNESS FOR PLUG-AND-PLAY INSTALLATION
 - INCLUDES RETAINING CLIPS
 - INSTRUCTION MANUAL WITH STEP-BY-STEP INSTALLATION OF ALL COMPONENTS
-
- CORRESPONDANCE PARFAITE AVEC LA FORME ET COULEUR DU TABLEAU DE BORD DE L'ÉQUIPEMENTIER POUR UN ASPECT SORTIE D'USINE
 - COMPREND UN HARNAIS POUR CONNECTER L'UNITÉ ALPINE AU VÉHICULE POUR UNE INSTALLATION PRÊTE À L'EMPLOI
 - COMPREND LES CLIPS DE MAINTIEN
 - MANUEL D'INSTRUCTIONS DÉTAILLANT L'INSTALLATION PAS À PAS DE TOUS LES COMPOSANTS

Alpine, Alpine Mobile Media Solutions, Driving Mobile Media Solutions are registered trademarks of Alpine Electronics, Inc.

Alpine, Alpine Mobile Media Solutions, Driving Mobile Media Solutions sont des marques déposées d'Alpine Electronics, Inc.

MADE IN CHINA
FABRIQUÉ EN CHINE