

FUSION

s c r e e n r e p l a c e m e n t

Custom-Fit Car Stereo for BMW
3 Series (F30/F31/F34/F35) with NBT System 2013-2017



Overview

The Vinland VBM3S5L12B8 car stereo features a 12.3-inch HD touchscreen and supports wireless Apple CarPlay and Android Auto. This system is designed specifically for 2013-2017 3 Series F30/F31/F34/F35 models equipped with the NBT System, and is intended to retain original factory vehicle functions. The availability of retained functions may vary depending on the vehicle's configuration.

Needed Tools

- Tools needed for installation:**
- Plastic pry tools, socket wrench (7mm or 10mm, depending on vehicle configuration), screwdriver, electrical tape, scissors, wrench, screw tray/box, and cable ties.
- Important Notes:**
- Before installation, disconnect the vehicle's negative battery terminal to prevent electrical short circuits or damage.
 - It is recommended to update the firmware after installation to ensure optimal performance.
 - For the latest installation instructions or additional assistance, download the latest manual from our website or contact Vinland customer support.

Package Contents



Power Harness



Dash Bezel



Car Stereo



CAN Bus Decoder



Chime Speaker



GPS Antenna



4G Antenna



USB to 4P



USB to 6P



RCA Cable



Rear-view
Camera Cable



9.84 FT/ 3M
Lavalier Microphone



Online Resources
Quick Guide



Product Care
Online Support

1. Product Appearance

This section describes the layout and connection ports of the **VBM3S5L12B8** car stereo to assist with proper installation.



- ①. **Power Port:** Supplies power to the car stereo via the vehicle harness.
- ②. **AV / Audio Input & Output Port:** Supports SUB, CVBS-IN, MIC, AUX-IN, SPDIF-OUT, RCA, AMP, and SIM connections.
- ③. **Reserved Port:** Currently not in use.
- ④. **CAN Bus Decoder Port:** Connects to the CAN Bus decoder to retain factory vehicle functions.
- ⑤. **Phone Link (USB):** Supports smartphone connection, hands-free calling, and multimedia projection.
- ⑥. **External Storage (USB):** Supports USB storage devices and accessories.
- ⑦. **Rear View Camera Input:** Connects to the rear-view camera.
- ⑧. **Wi-Fi Antenna Port:** Connects to the Wi-Fi antenna.
- ⑨. **GPS Antenna Port:** Connects to the GPS antenna.
- ⑩. **4G Antenna Port:** Connects to the 4G LTE antenna.

2. Dash Disassembly

1. Switch off the vehicle's ignition.



2. Use a plastic pry tool to release the retaining clips, then carefully remove the air vent assembly.



3. Remove the two screws securing the key panel.




4. Gently pry the lower plastic trim panel away to access and remove the internal screws.



5. Remove the panel, then disconnect all wiring connectors from the rear of the panel.



6. Remove the two screws securing the factory main unit.

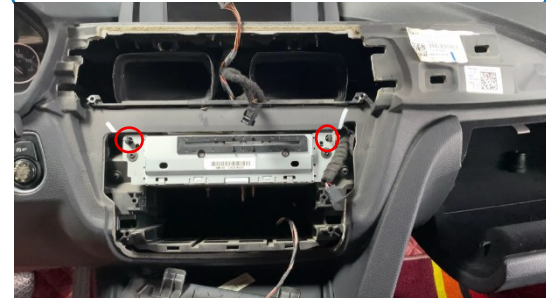

7. Remove the factory unit, then disconnect the connectors from the rear of the unit.




8. Remove the two retaining screws beneath the factory display.




9. Disconnect all connectors from the rear of the factory display.



3. Connection Diagram

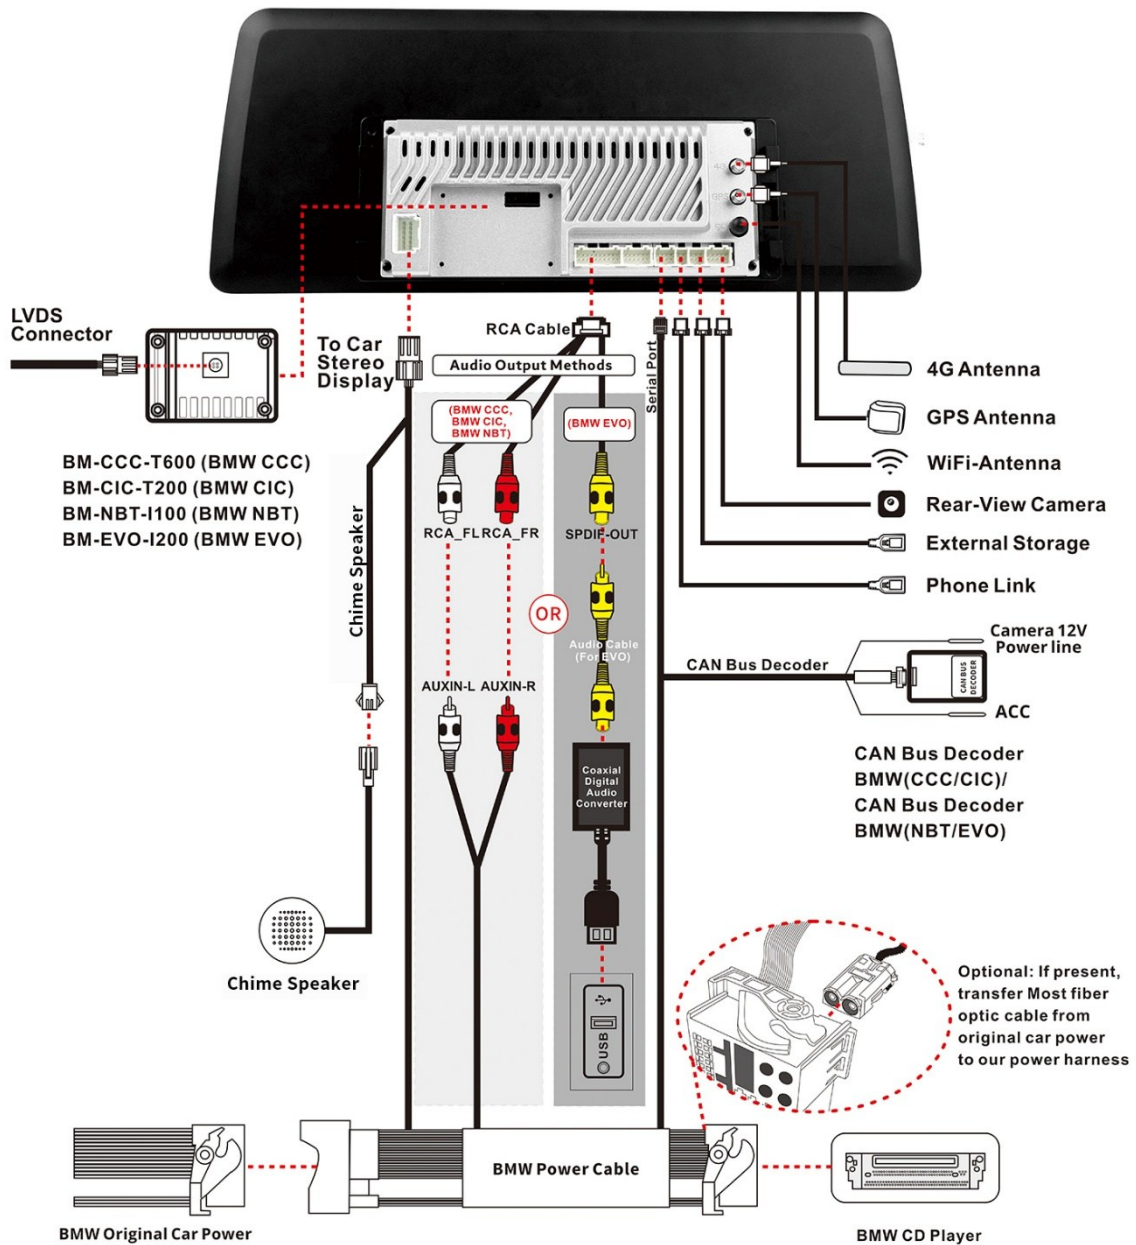

Routing the Power Harness

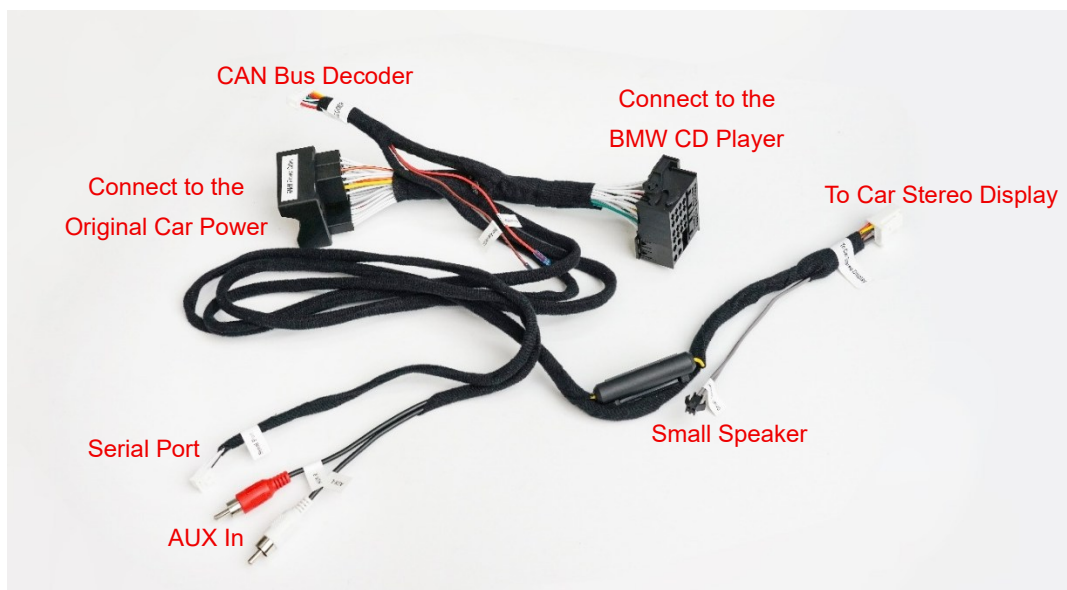

Wiring Instructions

Step 1 – MOST Fiber Optic Connection (If Applicable)

If the original vehicle power harness includes a MOST fiber optic cable, remove it and insert it into the fiber optic interface on the new power cable harness.

(Skip this step if the vehicle is not equipped with a MOST fiber optic system.)

Step 2 – Power Harness Connection

Connect the black socket of the BMW power cable to the original vehicle power harness. Then, plug the other end of the BMW power cable into the BMW CD player.

Step 3 – CAN Bus Connection

Plug the CAN Bus connector on the power cable into the CAN Bus decoder. Then, insert the serial port connector of the power harness into the corresponding port on the rear of the car stereo.

Step 4 – Speaker Connection

Connect the small speaker connector on the power cable harness to the supplied external speaker.

Step 5 – Audio Connection (AUX)

For BMW vehicles equipped with CIC, CCC, or NBT systems, connect the AUX IN L and AUX IN R connectors on the BMW power cable to the RCA-FL and RCA-FR connectors on the RCA cable connected to the car stereo.

Step 6 – Display Connection

Plug the connector on the power cable harness labeled “To Car Stereo Display” into the corresponding port on the car stereo.

Step 7 – LVDS Connection

Connect the original vehicle LVDS cable to the LVDS adapter module at the rear of the car stereo. Ensure the vehicle is powered off before connecting the LVDS cable.

Step 8 – Peripheral Connections

Refer to the Product Appearance section and connect the following components to their corresponding ports on the rear of the car stereo: 4G Antenna, GPS Antenna, Wi-Fi Antenna, Rear-View Camera, External Storage (USB), Phone Link (USB), RCA Cable, LVDS Adapter Module.

4. Assembly Process

Note: After completing all wiring connections, start the vehicle and verify that all functions operate correctly. Once confirmed, reinstall all removed components in their original positions.

1. Install the mounting bracket into the center console and secure it with screws.



2. Align the four clips on the rear of the stereo with the bracket slots, then press down gently to secure it.



3. Reinstall the factory unit and secure it with two screws.



4. Reinstall the key panel and secure it with four screws.




5.Reinstall the air vent in the center console.




5. Relevant Settings


● Setting the Screen Resolution

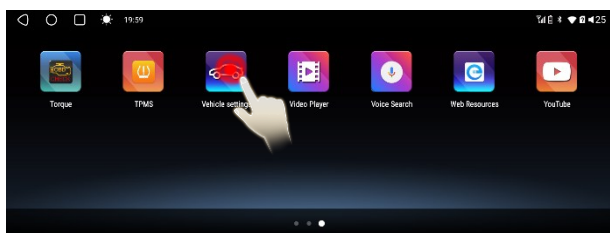

1. Tap “” > Tap “”

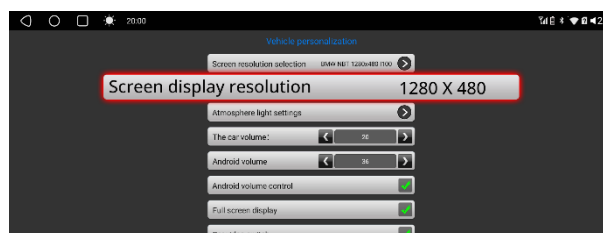

2. Refer to the “Screen display resolution”

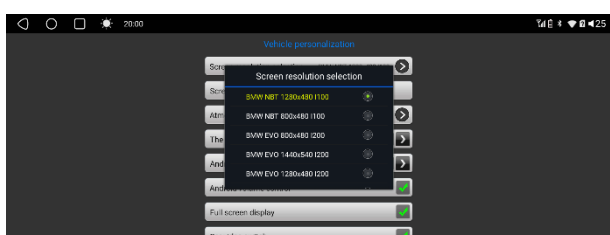


3. Under Screen Display Resolution, select the appropriate option based on your current iDrive system.


● Setup Camera

If your vehicle is equipped with a factory backup camera, turn off the Local Reverse Switch to enable the factory camera.


Note: If you install our aftermarket backup camera, no change to this setting is required.

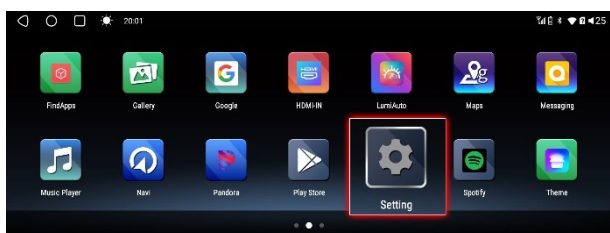

1. Tap the icon “”

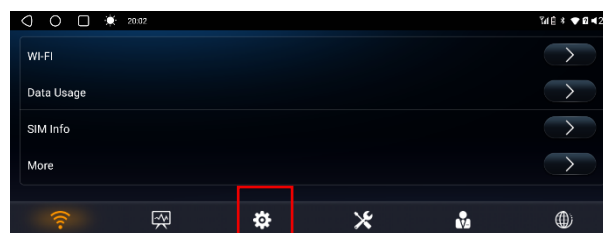


2. Tap the icon “”

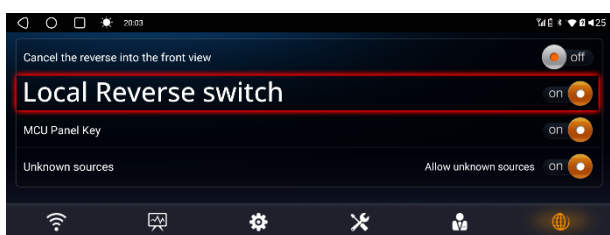


3. Locate the “Local Reverse Switch” option and turn it off to activate the factory backup camera.

- **Setup Sound**

To ensure the Android system audio is played through your car's original speakers, please adjust the sound settings as described below.

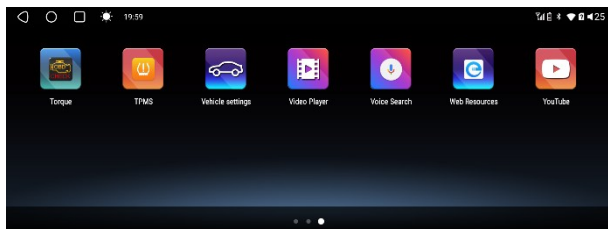

1. Tap the icon “”, then tap “” on the next interface.

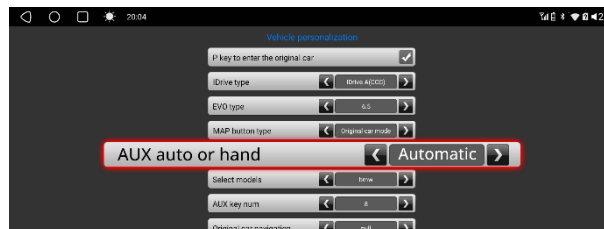


2. Find the “AUX Auto or Hand” option and set it to Automatic.

6. Troubleshooting


Before contacting technical support, please consult the troubleshooting table below to quickly resolve common issues.

No.	Problem Description	Solution
1	When switching to the original system, a prompt appears stating "No Appropriate Protocol."	Reset the vehicle protocol in the Maintenance Settings.

- 1) Tap the **Maintenance Settings icon**, enter the password 3368, and then tap OK to access the Maintenance menu.

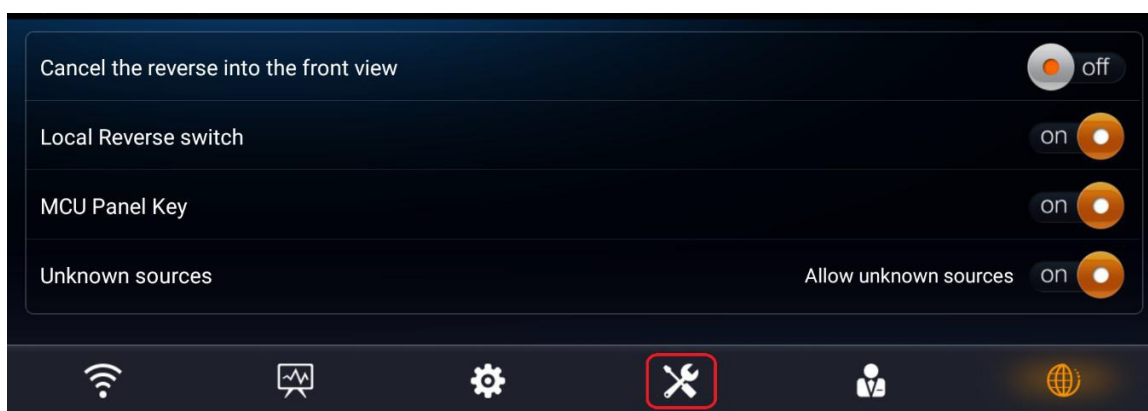


- 2) Locate and select **Car Model**, then set the protocol according to the following path:
LZ (HZ) → BBA → ALL → LZ (HZ)

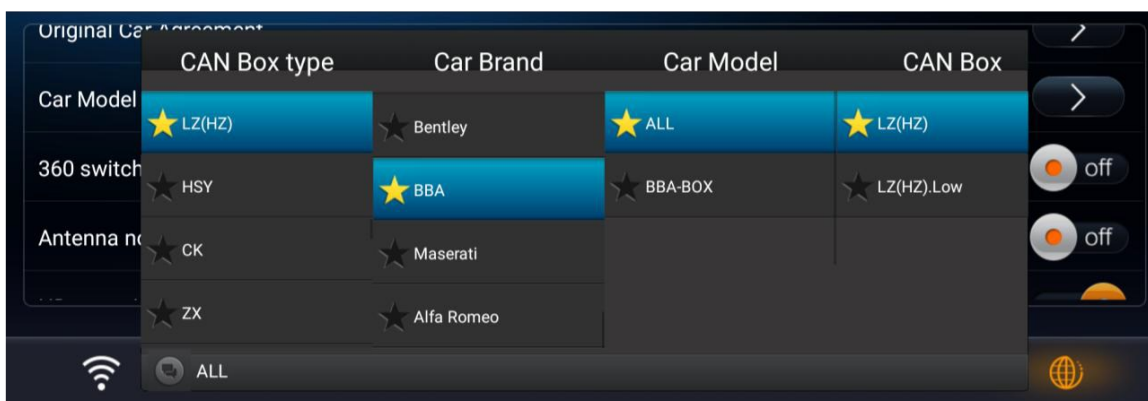

- 3) Exit the menu and check whether the system can now switch to the factory interface correctly.

No.	Problem Description	Solution
2	The car stereo displays Eastern Time (EST) while the vehicle is located in the Pacific Time Zone (PST) , even though automatic time settings are enabled.	Verify GPS reception and enable network-provided time zone settings, as time and time zone synchronization rely on GPS positioning and network-provided time zone data. If GPS positioning or network time zone settings are not active, the time zone may not update correctly.

- 1) Ensure the GPS antenna is securely connected to the GPS antenna port on the rear of the car stereo and that GPS positioning is active.

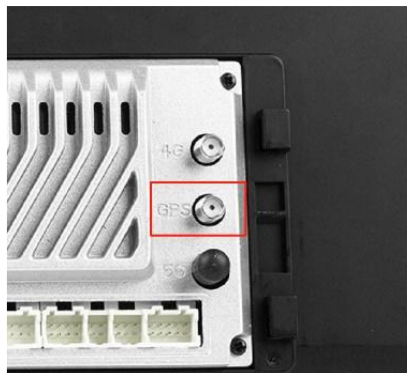

- 2) Go to **Settings > General Settings > Date & Time**, and enable **Use network-provided time zone**.

